


FAUCET DRILLING LAYOUT INSTRUCTIONS

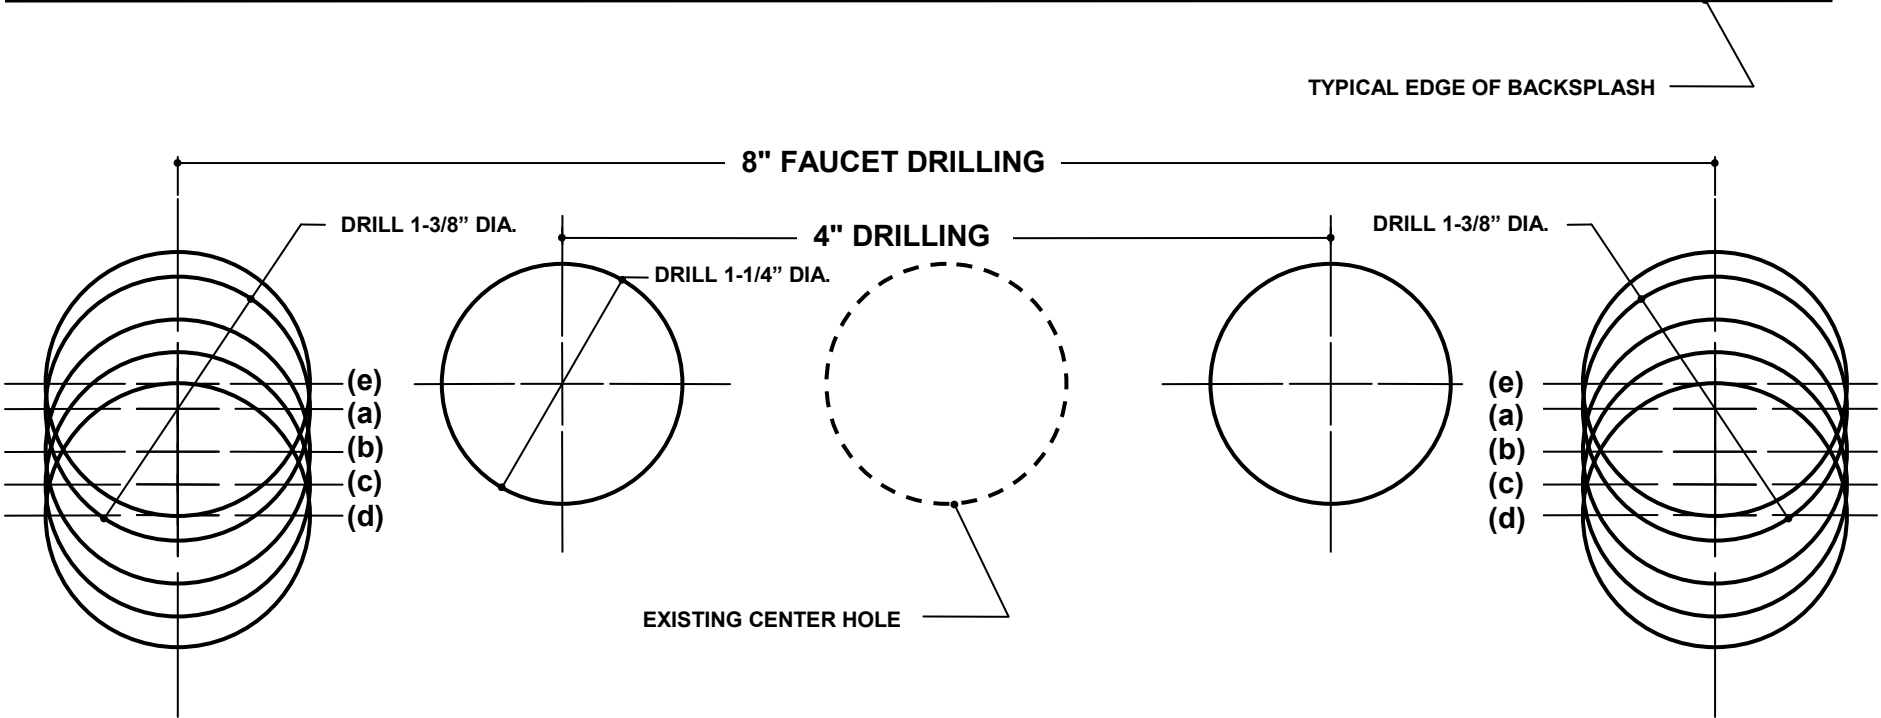

Instructions:

1. Center dashed circle over hole in top.
2. Align pattern line with backsplash edge.
3. For 8" contoured drilling select (a-e) locations from table at right.
4. For 8" Straight drilling select (e)
5. Mark the proper hole centers for drilling.
6. Use carbide tooth or grit edge hole saws.
7. Use 1-1/4" hole saw for 4" centers
8. Use 1-3/8" hole saw for 8" centers.
9. Drill from the top with light pressure and a wobbling motion to ease plug removal.

